

Levelling Gun




Trade Levelling Gun



Cap
40 x 15 x 11mm



Universal
curved spacer
75 x 14 x 1.5mm

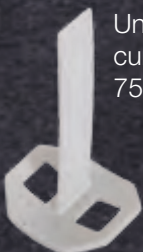

Standard Curved Spacer
75 x 14 x 1.9mm



National Customer Service 1800 505 045

Lippage Levelling System

Products

100pce	Lippage Caps x 100pcs	LIPC100
250pce	Lippage Cap x 250pc Bucket	LIPC250B
100pce	Lippage Spacer Curved 1.9mm x 100pc Bag	LIPS100
250pce	Lippage Floor Spacer Curved 1.9mm x 250pc Bucket	LIPS250B
500pce	Lippage Floor Spacer Curved 1.9mm x 500pc Bucket	LIPS500B
1000pce	Lippage Spacer Curved 1.9mm x 1000pc Bucket	LIPS1000B
100pce	Lippage Spacer Universal x 100pcs	LIPSU100
250pce	Lippage Spacer Universal x 250pcs Bucket	LIPSU250B
500pce	Lippage Spacer Universal x 500pcs Bucket	LIPSU500B
1000pce	Lippage Spacer Universal x 1000pcs Carton	LIPSU1000C
2000pce	Lippage Spacer Universal x 2000pcs Carton	LIPSU2000C
tool	Lippage Levelling Gun	LIPTL
tool	Lippage Trade Levelling Gun	LIPTLT
kit	Lippage Starter Kit - 100pcs Includes 100 x Caps, Spacers 1 x LIPTL Lippage Gun	LIPK100
kit	Trade Lippage Starter Kit Inc 100 x LIPC, LIPSU, 1 x LIPTLT Lippage Trade Gun	LIPK100TR

Tiles often move during the drying process, so to avoid disappointment and costly repairs use the DTA Lippage System. Using the DTA Lippage System during the installation process will ensure you end up with a lippage free and level surface.



VIDEO DEMO


1. To view the video, download any QR Code Reader App, on your smart phone.
2. Scan the QR Code to watch video.



Lippage Levelling
System

servicing retail, commercial
& industrial markets
for over 35 years.



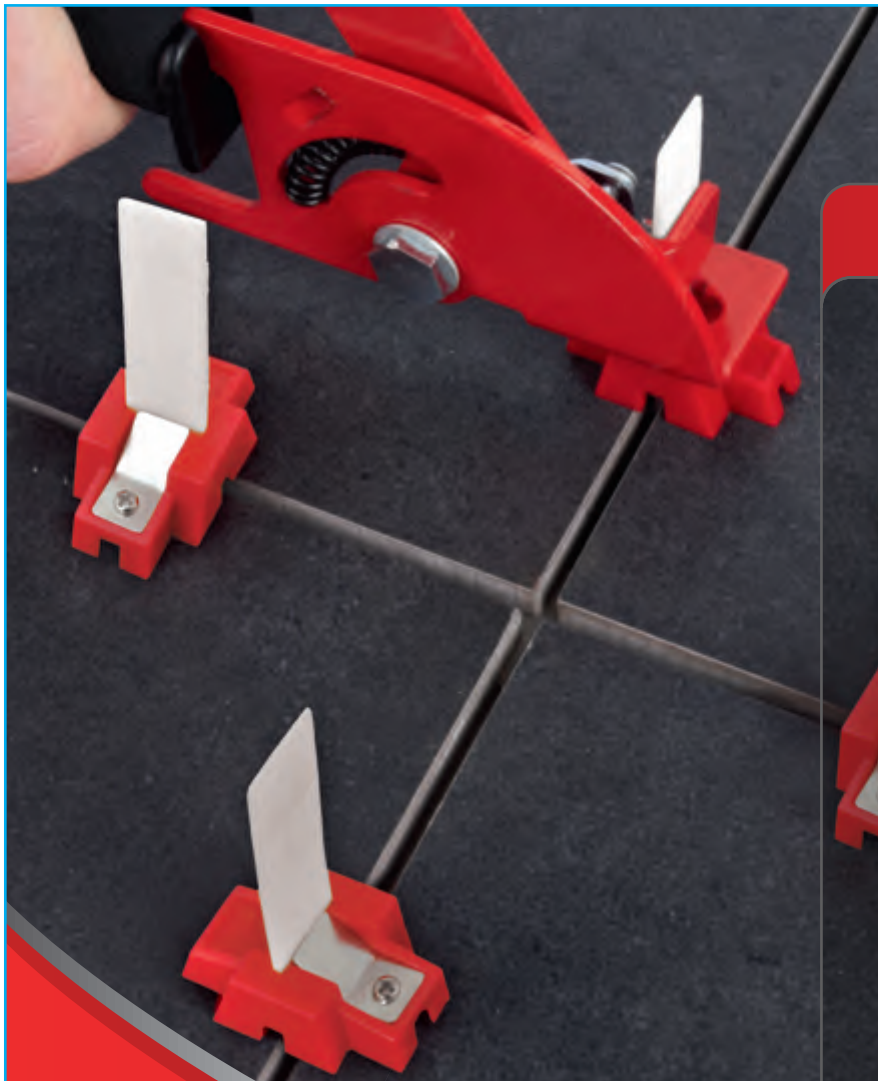

Lippage Coverage

Square Tiles

cm	10	20	30	40	50	60	70	80	90	100	110	120
10												
20	44 Pcs/M ²											
30	25 Pcs/M ²											
40	11 Pcs/M ²											
50	7 Pcs/M ²											
60	6 Pcs/M ²											
70												
80												
90												
100												
110												
120												

Rectangle Tiles


cm	10	20	30	40	50	60	70	80	90	100	110	120
10												
20	50 Pcs/M											
30	22 Pcs/M ²											
40	9 Pcs/M ²											
50	6 Pcs/M											
60												
70												
80												
90												



Lippage Instructions




- 1 Place Lippage Spacer between tiles. 100mm from both ends of the tile.

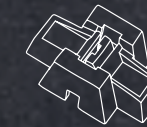

- 2 Once tile and spacer are in place, fasten the Lippage Cap.



- 3 Clamp the two pieces together with the lippage tool to tighten. This will level & hold the tiles in place while the tile adhesive sets.

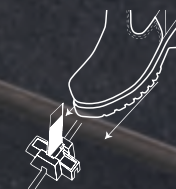

- 4 Once tile adhesive has dried, simply kick the Cap along the grout joint to remove.* Grout to finish tiled area.

- 5 Remove Cap from Spacer for re-use.

* Refer to adhesive manufacturer for drying time.

- ✓ Holds tiles level
- ✓ Ideal for walls & floors
- ✓ Eliminates lippage on uneven tiles



The Choice of Professionals

www.dtaigroup.com